

November 2003
Second Printing
Quick Reference Guide

ESSENTIAL INFORMATION

FUSES If your electrical components aren't working properly, a fuse may have blown.*

FUEL PUMP SHUT-OFF SWITCH Your fuel pump shut-off switch may need to be reset after a collision. (The engine would crank but not start.) The switch is located on the left side of the trunk between the left rear tail light and the trunk liner, to the left of the hole in the trunk liner.*

FUEL TANK CAPACITY Your tank holds 15.7 gallons of fuel; for optimum performance, use "Regular" unleaded fuel with a pump (R+M)/2 octane rating of at least 87.

CHANGING THE TIRES Your vehicle is equipped with a temporary spare tire, which is smaller than a regular tire and designed for emergency use only. The jack, spare tire, jack handle and the lugnut wrench are located in the wheel well underneath the trunk floor.

TIRE PRESSURE Your tire pressure is set at the dealership according to the specifications found on the Certification Label on the front door latch pillar on the driver's side. Tire pressure information can also be found on the Tire Information label on the inside of the fuel filler door. Please check your tire pressure during routine maintenance and seasonal changes.

ROADSIDE EMERGENCIES In addition to your New Vehicle Limited Warranty, Ford provides new vehicle owners with a complimentary roadside assistance program; this service is available 24 hours, seven days a week for three years or 36,000 miles. It covers: **CHANGING A FLAT TIRE / JUMP STARTS / LIMITED FUEL DELIVERY LOCK-OUT ASSISTANCE / TOWING OF YOUR VEHICLE**

*See your Owner's Guide for more information.

ADDITIONAL FEATURES

CONVERTIBLE TOP (IF EQUIPPED) The convertible top switch is located on the console in front of the armrest. Use this switch to raise or lower the top. Note: The convertible top will not operate unless the parking brake is engaged.



The top can be lowered with the side windows either up or down. Don't lower the top when the top material is wet or when the vehicle is moving. To prevent damage to the rear glass window, never store articles behind the rear seat.

When raising the top, the front and rear-side windows must be lowered. Open both top clamps before the top meets the windshield header. Remove the boot cover and store it in the luggage compartment when not in use. To prevent damage to the top, never raise it while the vehicle is moving.

Please refer to your Owner's Guide for detailed information on operating your convertible top.

TILT STEERING WHEEL LEVER (IF EQUIPPED) The tilt steering wheel lever is located to the left of the steering column underneath the turn signal. Pull the lever toward you to move the steering wheel up or down. Hold the control while adjusting the wheel to the desired position, then release the control to lock the steering wheel in position. Warning: Never adjust the steering wheel when the vehicle is moving.



POWER SIDE VIEW MIRRORS (IF EQUIPPED) Move the mirror selector control all the way to the left to adjust the left mirror or all the way to the right to adjust the right mirror. Next, move the control in the direction you wish to tilt the mirror. Return the selector control to the center position to lock the mirrors in place.



REMOTE ENTRY SYSTEM

UNLOCK Press this control once to unlock the driver's door, and twice to unlock the passenger's door. After the first press, the interior lamps will then illuminate.

LOCK Press this control once to lock all of the doors. Pressing the control a second time will chirp the horn and flash the lights to confirm that all doors are closed and locked.

PANIC ALARM Press this control to activate the panic alarm. Press the control again to deactivate.

TRUNK Press this control once to open the trunk. Ensure that the trunk is closed and latched before driving your vehicle. Failure to latch the trunk may cause objects to fall out of the trunk or block the rear view.



The interior lights will turn on when the remote is used to unlock the doors or sound the personal alarm. The interior lights will turn off if the ignition is switched to the ON position. The dome lamp control (if equipped) must not be set to the OFF position for the illuminated entry system to operate. The remote-control entry features only operate with the ignition in the LOCK position.

CLIMATE CONTROL



A FAN SPEED CONTROL Rotate the knob to adjust the volume of air circulated in the vehicle.

B TEMPERATURE CONTROL Rotate the knob to adjust the temperature of the airflow inside the vehicle.

C MAX A/C Uses recirculated air to quickly cool the vehicle. MAX A/C is noisier than A/C, but is more economical and efficient. This mode may reduce undesirable odors from entering the vehicle.

D A/C Uses outside air to cool the vehicle. Airflow will be from the instrument panel vents.

E PANEL Distributes outside air through the instrument panel vents.

F FLOOR Distributes outside air through the floor vents.

G FLOOR AND DEFROST Distributes outside air through the windshield defroster vents and the floor vents.

H DEFROST Distributes outside air through the windshield defroster vents. It can be used to clear ice or fog from the windshield.

AUDIO SYSTEMS



SINGLE-CD RADIO

A VOLUME/POWER CONTROL Press the control to turn the audio system on or off. Turn the control to raise or lower volume.

B AM/FM SELECT In radio mode, press to select AM or FM frequency bands. In CD mode, press to stop play and begin radio play.

C SEEK FUNCTION In radio mode, press to find the next listenable station up or down the band. In CD mode, press to select the next/previous track on the current disc.

D TUNE/DISCS In radio mode, press to move to the next frequency up or down the band.

E SCAN FUNCTION In radio mode, press to hear a sampling of all listenable stations. In CD mode, press to hear a brief sampling of all selections.

F SETTING MEMORY PRESET STATIONS Select AM, FM1, or FM2 band, then select a station. Next, press and hold a control until the sound returns.

G COMP (COMPRESSION) In CD mode, press to bring louder and softer levels into a more comfortable listening level. The compression icon (c) will appear in the display.

H SETTING THE CLOCK Press and hold CLK and press SEEK to set the hour. Press and hold CLK and press TUNE to set the minute.

I FAST REVERSE AND FAST ADVANCE To Fast Reverse or Fast Advance in CD mode, press and hold the respective button. When the desired position in the track is heard, release the button.

J CD Press to enter CD mode or to play a CD already loaded into the system.



MACH1000® SIX-CD IN-DASH RADIO

A VOLUME/POWER CONTROL Press the control to turn the audio system on or off. Turn the control to raise or lower volume. The speed sensitive volume feature automatically adjusts radio volume in accordance with vehicle speed to compensate for road and wind noise. To engage, press and hold the volume control for five seconds (with the radio on), then press SEL to choose the compensation level.

B CD/AUX Press to select CD/AUX modes. No CD will display if there is not a CD present in the audio system. If a disc is loaded, there will be a number (1-6) inside the circle on the display.

C AM/FM Press AM/FM to select AM or FM frequency bands. In CD mode, press AM/FM to stop play and begin radio play.

D SETTING MEMORY PRESET STATIONS Select AM, FM1, or FM2 band, then select a station. Next, press and hold a memory preset control until the sound returns.

E SETTING THE CLOCK Press MENU until SELECT HOUR or SELECT MINUTE is displayed. Press SEL to set the time. Press MENU again to disengage the clock mode.

F DIGITAL SIGNAL PROCESSING Press DSP to access the Ambiance menu. Ambiance gives you the feeling of "being there" to your music. Press SEL to engage/disengage. Press DSP again and then SEL to access the desired occupancy mode (ALL SEATS, DRIVER SEAT, REAR SEATS).

G SEEK FUNCTION In radio mode, press to move to the next listenable station up or down the band. In CD mode, press to select the next/previous track on the current disc.

H DISC/TUNE CAT In radio mode, press to manually move up or down the frequency band. In CD mode, press to select the next/previous disc in the CD player. CAT is only available when equipped with satellite radio. The kit to enable satellite reception is available through your Ford dealer. Detailed satellite instructions are included with the dealer-installed kit.

I SCAN FUNCTION In radio mode, press to hear a sampling of all listenable stations. In CD mode, press to hear a brief sampling of all selections on the current CD.

J SAT (SATELLITE) Your MACH1000® radio comes equipped with satellite-ready capability. The kit to enable satellite reception is available through your Ford dealer. Detailed satellite instructions are included with the dealer-installed kit.

K LOAD CD Press to open the CD door, then load the CD into the player. Press LOAD and then a preset number to select a slot. Press and hold LOAD to activate autoloading. In radio mode, press to begin CD play.

2004MUSTANG / QUICK REFERENCE GUIDE



FORD MOTOR COMPANY

This CD is not intended to replace the Owner's Guide that contains more detailed information concerning the features of your vehicle and important safety warnings to help reduce the risk of injury to you and your occupants. Always carefully read your entire Owner's Guide when first learning about your vehicle and consult the appropriate section when questions arise.

4R3J-19G217-AA



CONGRATULATIONS

2004 MUSTANG



You have accepted a starring role in the Mustang Phenomenon, an automotive love affair that is unlike any other. The Ponycar passion that began decades ago on quarter-mile stretches of asphalt has evolved to become your personal automotive experience today. This Quick Reference Guide will help you mesh quickly with many of your new car's features. It was designed for use with the accompanying CD-ROM. Insert the CD into any audio CD player; find the numbered call-outs on the instrument panel portion of this guide, then select the corresponding number on the CD audio track for a fast, convenient introduction to Mustang.

 
For more detailed information, place the CD into your computer (the CD jacket will tell you if your computer meets the minimum configuration requirements) – or consult your Owner's Guide.



INTERIOR FEATURES

2 HEADLAMP CONTROL AND PANEL DIMMER


Pull the control toward you to the first position to turn on the parking lamps, tail lamps, license plate lamps and marker lamps. Pull the control toward you to the second position to turn on the headlamps (in addition to the previous lamps).

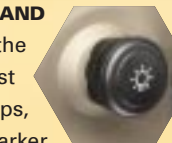

When the headlamp control is in the parking lamp or low-beam position, rotate the control clockwise/counterclockwise to adjust the brightness of the instrument panel. Rotate fully counterclockwise to turn on the courtesy lamps.

3 FOG LAMP CONTROL (IF EQUIPPED)

 Press to activate the foglamps during headlamp operation. The foglamp indicator light will illuminate. Press the control again to deactivate the foglamps. The foglamps will not operate when the high beams are activated.

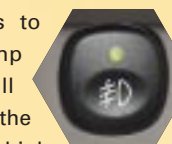


4 ABS WARNING LAMP

Illuminates momentarily when the ignition is turned to the ON position. In an emergency, apply continuous force on the brake to prevent wheel lock when braking on slippery surfaces - do not pump your brakes. Any pulsation or noise you may feel or hear is normal.




5 SERVICE ENGINE SOON LAMP

 Illuminates briefly to ensure the system is functional. If the light turns solid or blinks after the engine is started, a malfunction has occurred. Seek service immediately from your dealership.

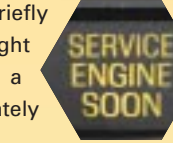


6 REAR WINDOW DEFROSTER CONTROL

 Press to clear the rear window of thin ice and frost. A small LED will illuminate when the rear defroster is activated. Press the control again to turn off the defroster. The ignition must be in the ON position to operate the rear window defroster. The defroster turns off automatically after 10 minutes or when the ignition is turned to the OFF position.

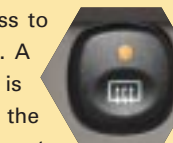


7 GEARSHIFT/OVERDRIVE CONTROL (IF EQUIPPED)

 Overdrive is the normal drive position for the best fuel economy. Only deactivate (OFF) overdrive when driving with a heavy load, towing a trailer up or down steep hills, or when additional engine braking is desired. To deactivate, press the transmission control switch on the gearshift lever.

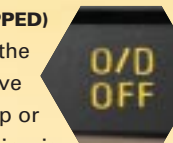

8 HAZARD FLASHER CONTROL

 Press to activate all hazard flashers simultaneously in an emergency to warn traffic of vehicle breakdown, approaching danger, etc. Press the control again to turn the flashers off. The hazard flashers can be operated when the ignition is off.

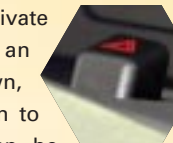

9 HOOD RELEASE

Pull the hood release handle located under the bottom left corner of the instrument panel; release the auxiliary latch located under the front center of the hood. Lift the hood and secure it with the prop rod.



 
10 TRACTION CONTROL (IF EQUIPPED)

This system allows your rear-wheel drive vehicle to make better use of available traction on slippery surfaces by working closely with the anti-lock braking system. The system defaults to ON, however, should you become stuck, try switching the traction control system off.



11 SPEED CONTROL (IF EQUIPPED)

To operate, the speed control must be ON and the vehicle speed must be at or above 30 mph. To set a speed, press and hold SET ACCEL until you reach the desired speed, then release. To set a higher speed, press SET ACCEL again. Press and release this control to increase the vehicle set speed in small amounts by 1.6 km/h (1 mph). To set a lower speed, press and hold COAST until you reach the desired speed, then release. Press and release this control to decrease the vehicle set speed in small amounts by 1.6 km/h (1 mph). Pressing RESUME will return to a previously set speed. To turn the speed control off, press the OFF button, turn off the vehicle ignition, or depress the brake pedal to disengage.

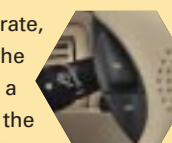

12 TURN SIGNAL AND WIPER/WASHER CONTROL

Rotate the windshield wiper control to the desired interval, low- or high-speed position. When in the intermittent position, rotate the control upward for fast intervals or downward for slow intervals. Push the control on the end of the stalk to activate the washer. Push and hold for a longer wash cycle. The washer will automatically shut off after ten seconds of continuous use. To operate the mist function of the windshield wipers, push and release the windshield washer control quickly. The wipers will cycle one or two times.



For extended wiper blade quality, occasional cleaning of the wiper blades with a non-abrasive cleaner available from your dealer is required.